



Let op: Daytime running light moet uitgeschakeld worden voor installatie van de DRLSF
Important: Before using DRLSF: Daytime running light must be set to: Without

Parameters – Visibility



Lighting

Lighting


Daytime running light settings

This parameter controls which lamps are to be used as daytime running lights.

Possible values:

- Without: No daytime running lights
- Dipped beam with position lamps.
- Dipped beam or foglights with position lamps.
- Dedicated LED.
- Dedicated LED with position lamps.

Factory setting: Depends on vehicle specification.

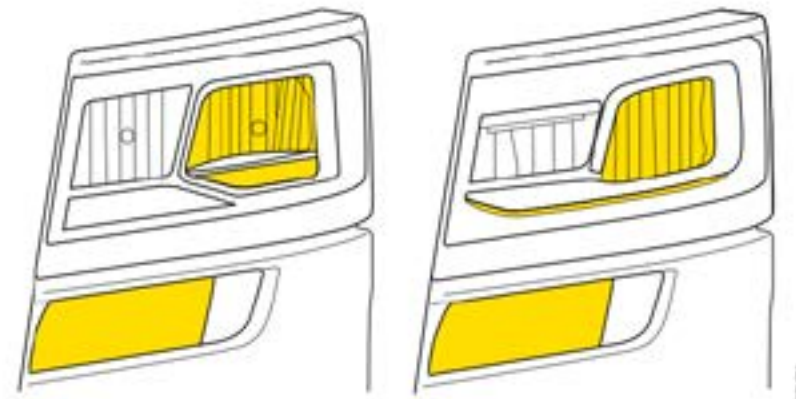

Daytime running lights in H7 headlamp and LED headlamp.